



Technical Specifications

| | |
|-------------------------|--|
| Mode of Operation | Maintained and Non-Maintained |
| Operating Temperature | 10-50°C |
| Input Voltage | 220-240 VAC / 50Hz |
| Output Voltage | 220 VAC / 50Hz \pm 2% |
| Wave Form | Pure Sine Wave |
| Load Capacity | 2000 W @ P.F = 1 1600 W @ P.F = 0.8 |
| Battery Type / Capacity | Sealed Lead-Acid Maintained Free 48V-150Ah (12V-150Ah x 4) |
| Protection Features | - AC. Input & Output Circuit Breaker - DC. Circuit Breaker - AC. Input Under Voltage Protection - Battery Low Voltage Cut-Off |
| Testing Systems | Auto Test |
| Charging Method | 3 Steps Charger System |
| Charging Period | \leq 24 Hrs |
| Backup Time | 2.0 Hrs |
| Housing | Electro-galvanized steel sheet 1 mm. thick with epoxy powder coating |
| Dimensions (L x W x H) | 620 x 600 x 1200 mm |
| Weight | 214.00 Kg |
| Degree of Protection | IP20 |
| Mounting | Floor Standing |
| Standards / Compliance | - TIS.1955-2551 - ISO9001 - CE |


Product Overview

Central Battery Systems by Inverter 220V Series is used to detect any abnormalities of the main power distribution system. In case of error or emergency, the unit will convert the battery voltage stored in the chemical form into the electric power and supply it to the inverter where the DC voltage from the battery will be converted into the AC voltage at 220VAC 50Hz to turn on the emergency light. On the other hand, when the main power distribution system resumes its normal operation, the unit will stop supplying the backup power and start recharging the battery for later use in case of another error or for the emergency light test.

Features

- Operate for 2.0 hours on backup time
- Battery charge automatically with 3 Step Charger Constant Voltage, Limit Current and Flip-Flop Charger
- Battery overcharge protection circuit prevents overcharge which is the cause of battery swelling
- Battery discharge protection circuit prolongs the battery life
- Under voltage protection circuit allows the unit to automatically activate the emergency light in case any fault occurs in the main power distribution system or in case of power failure (140-160 VAC)
- Automatically enabling a 30 minutes test every 30 days
- The system notifies the device status through audible signals with Battery Sound Indicator.
- The system alerts each time it automatically tests the battery (Auto Test) and detects a backup power of less than 30 minutes (Battery Fail).
- Charging Fail notification for battery charging issues.

Dimensions (mm)

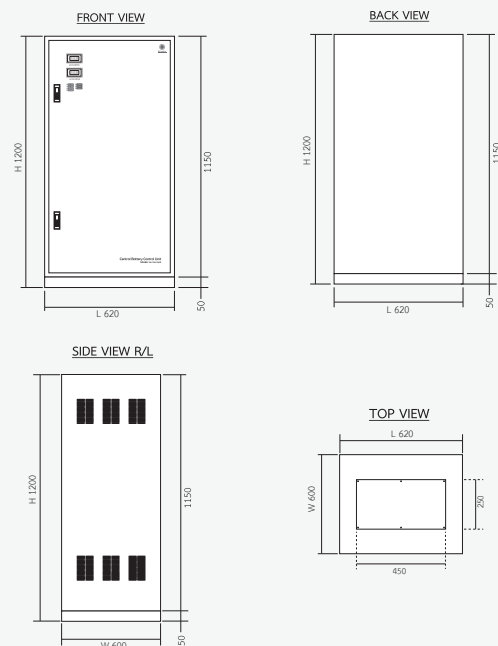

Indicators



AC.VOLTMETER



DC.VOLTMETER



- AC.VOLTMETER ▶ Indicating the input and output voltage
- DC.VOLTMETER ▶ Indicating the battery voltage
- LED AC.Input ▶ Indicating the status of the input voltage of 220-240VAC
- LED DC.Input ▶ Indicating the status of the battery power into the device
- LED Operate ▶ Indicating the operation status of the inverter unit
- LED Testing ▶ Indicating automatic battery discharge status
- LED Charging ▶ Indicating charging status
- LED Battery Fail ▶ Indicating the failure status of the battery
- LED Charge Fail ▶ Indicating the failure status of the battery charging